

hp photosmart 7200 series setup guide

hp photosmart 7200 series 安裝指南




Windows PC

Be sure to insert the HP Photosmart CD before you connect the printer to your computer with the USB cable.

在您将印表機用 USB 纜線連接到電腦前，請確定先插入 HP Photosmart 光碟。



1

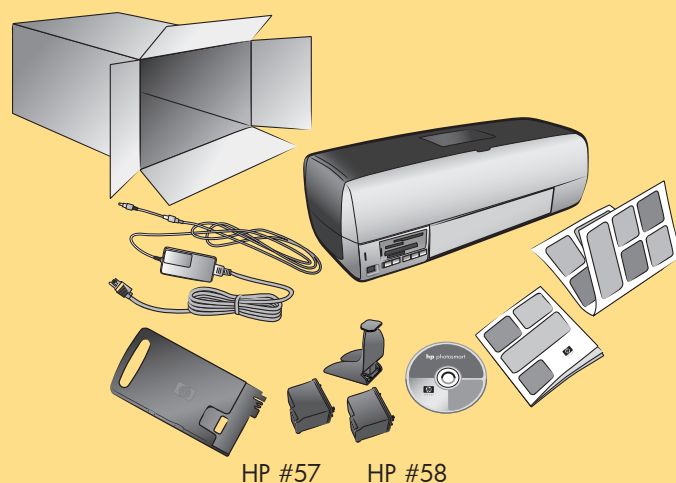


unpack your printer

打開印表機包裝



2

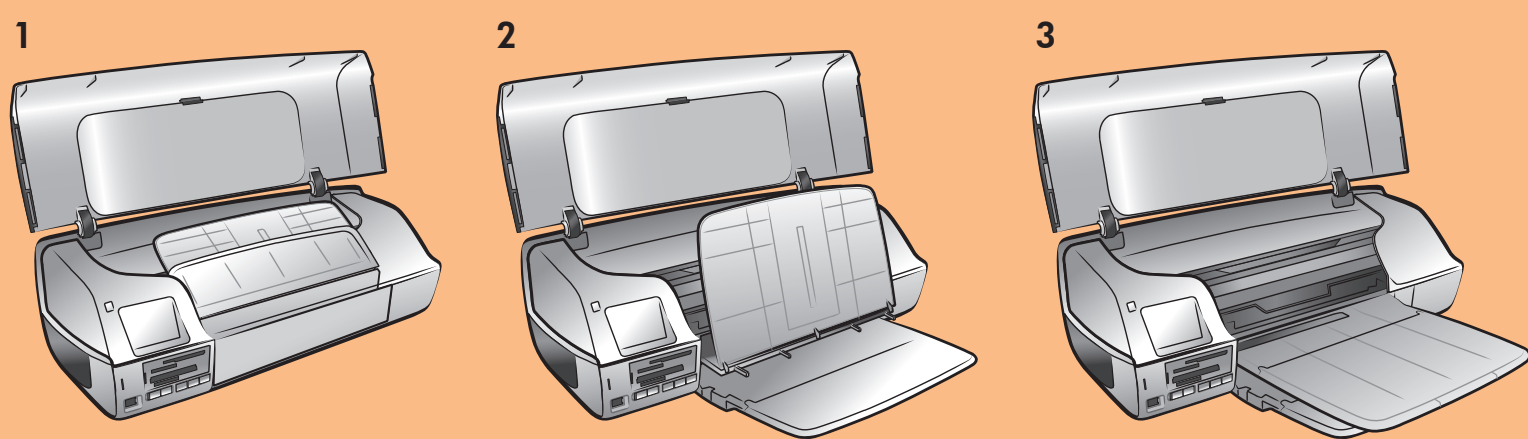


open your printer

開啟印表機



3

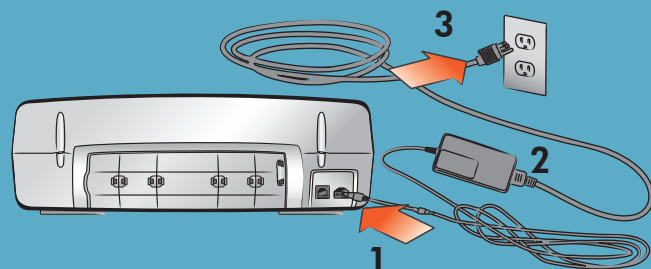

plug in the power cord

Note: Do not connect the printer to your computer until prompted by the installation software.

1. Plug the power module into the back of the printer.
2. Plug the power cord into the power module.
3. Plug the power cord into a working electrical outlet.


插入電源線

註：安裝軟體提示之前，請勿連接您的印表機到電腦。

1. 在印表機背面插入電源模組。
2. 將電源線插入電源模組中。
3. 將電源線插入工作正常的插座中。



4

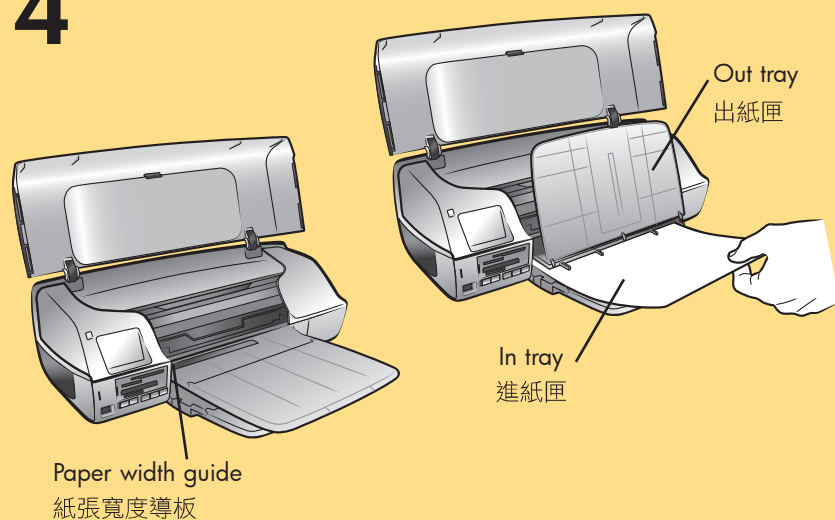

load plain paper in the in tray

1. Lift the main cover of the printer, and slide the paper width guide as far to the left as it will go.
2. Lift the Out tray and place a stack of plain paper in the In tray.
3. Push the paper into the printer as far as it will go without bending.
4. Adjust the paper width guide to fit close to the edge of the paper without bending the paper.
5. Lower the Out tray and main cover.

在進紙匣中裝入一般紙張

1. 提起印表機主蓋，並儘量向左滑動紙張寬度導板。
2. 提起出紙匣並在進紙匣中裝入一疊一般紙張。
3. 將紙張儘量向裡推入印表機，而不使紙張彎曲。
4. 調整紙張寬度導板，使其緊靠紙張邊緣而不會彎曲紙張。
5. 放下出紙匣和主蓋。



5



install the print cartridges

1. Press the **ON** button to turn the printer on.
2. Lift the main cover. The print cartridge cradle moves to the middle of the printer.
3. Pull the **pink pull-tab** to remove the clear tape from each print cartridge. Do not touch or remove the copper contacts.
4. Insert the print cartridges with the copper contacts facing the printer, and with one label facing up and the other label facing out from the printer. Insert the **HP #57 tri-color** print cartridge in the left stall. Insert the **HP #58 black** print cartridge in the right stall.
5. Close the main cover.

install an optional print cartridge

Be sure to purchase an HP #56 black print cartridge separately.

- To print text documents faster and better, replace the photo print cartridge in the right stall with an HP #56 black print cartridge.
- To go back to printing beautiful photos, remove the black print cartridge and reinstall the HP #58 photo print cartridge in the right stall.

Store the unused print cartridge in the print cartridge storage area in your printer.

安裝列印墨匣


1. 按**開啟**按鈕，開啟印表機。
2. 提起主蓋。列印墨匣托架會移至印表機的中央。
3. 拉開**粉紅色標籤**以揭下每個列印墨匣上的透明膠帶。切勿碰觸或移除銅接點。
4. 讓銅接點朝向印表機，一個標籤向上，其他標籤朝向印表機外側，插入列印墨匣。
在左邊隔室中插入 **HP #57 三色列印墨匣**。在右邊隔室中插入 **HP #58 相片列印墨匣**。
5. 關閉主蓋。

安裝選用的列印墨匣

請確定單獨購買 HP #56 黑色列印墨匣。

- 若要更快更好地列印文字檔案，請將右邊隔室的相片列印墨匣更換為 HP #56 黑色列印墨匣。
- 若要重新用該印表機列印精美的相片，請取出右邊隔室中的黑色列印墨匣並重新安裝 HP #58 相片列印墨匣。

將未使用的列印墨匣儲存在印表機內列印墨匣儲存區的列印墨匣護套中。

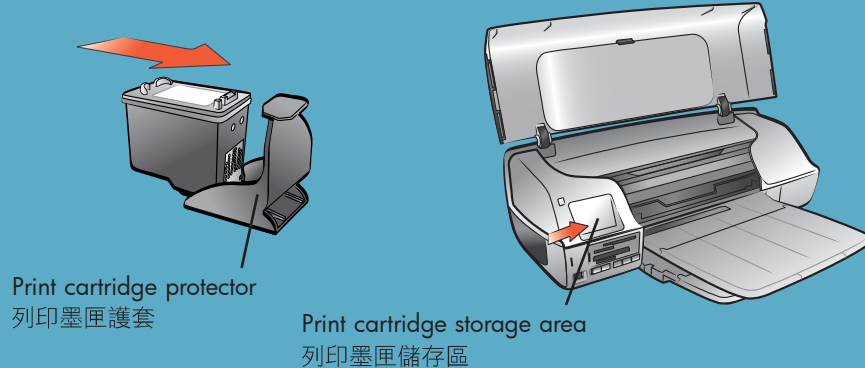

6



Important: You must insert the HP Photosmart CD to install the printer software.

Note: For more detailed instructions or troubleshooting information, see the *HP Photosmart Setup & Support Reference Guide*.




重要：要安裝印表機軟體，您必須插入 HP Photosmart 光碟。

註：如需更詳細的指示或疑難排解資訊，請參閱《HP Photosmart 安裝與支援參考指南》。

install the hp photosmart printer software

Windows PC

- Be sure you have completed boxes 1 through 5 on the other side of this Setup Guide. If your computer is off, turn it on.
Important: Do not connect the printer to your computer until prompted.
Important: Disable virus-checking software before you install the printer software.
- Insert the HP Photosmart CD into your computer's CD-ROM drive. Wait for the files to load. The following dialog box appears.

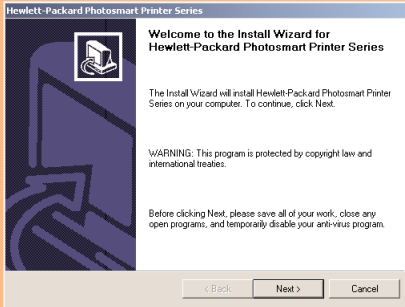


- Click **Next**, then follow the onscreen instructions to install the printer software.
Note: If the dialog box does not appear, use Windows Explorer or My Computer to locate your CD-ROM drive, then double-click **setup.exe**. The HP Photosmart printer dialog box appears.
Important: Do not connect the printer to your computer until prompted.
- Continue with box 7 to connect the printer to your computer.

安裝 hp photosmart 印表機軟體

Windows PC

- 確定您已經完成本安裝指南另一面上方塊 1 至方塊 5 中的步驟。如果您的電腦已關閉，請開啟。
重要：出現提示之前，請勿連接您的印表機到電腦。
重要：安裝印表機軟體之前，請停用病毒檢查軟體。
- 將 HP Photosmart 光碟插入電腦的 CD-ROM 光碟機。等候載入檔案。將出現下列對話方塊。

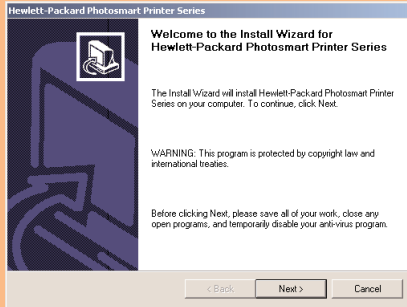

- 按一下下一步，然後依照電腦螢幕上的指示安裝印表機軟體。
註：如果對話方塊未出現，請使用「Windows 檔案總管」或「我的電腦」找到您的 CD-ROM 光碟機，然後連接兩下 **setup.exe** 檔案。會出現「HP Photosmart 印表機」對話方塊。
重要：出現提示之前，請勿連接您的印表機到電腦。
- 繼續執行方塊 7 中的步驟，將印表機連接到您的電腦。

Macintosh



- Be sure you have completed boxes 1 through 5 on the other side of this Setup Guide. If your computer is off, turn it on.
Important: Disable virus-checking software before you install the printer software.
- Continue with box 7 to connect the printer to your computer.


Macintosh




- 確定您已經完成本安裝指南另一面上方塊 1 至方塊 5 中的步驟。如果您的電腦已關閉，請開啟。
重要：安裝印表機軟體之前，請停用病毒檢查軟體。
- 繼續執行方塊 7 中的步驟，將印表機連接到您的電腦。



7

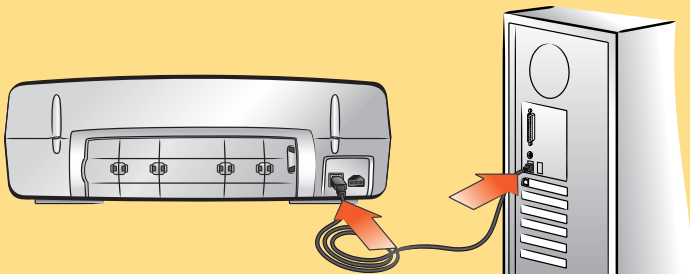

Windows PC

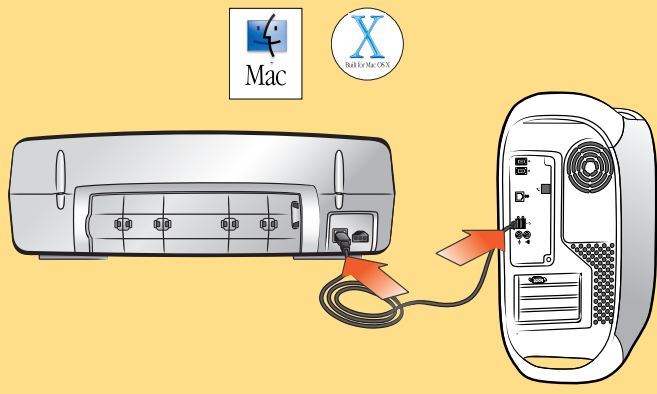

Macintosh

connect the printer to your computer

Note: Do not connect the printer to your computer until prompted by the installation software.

- Purchase a USB-compliant interface cable separately. HP recommends the USB cable be less than 10 feet (3 meters).
- Plug one end of the USB cable into your computer's USB port.
- Plug the other end of the USB cable into the USB port on the **back** of your printer.

Note: The USB port on the front of your printer is for connecting your HP direct-printing digital camera or notebook computer.

Important: Be sure the printer is connected directly to your computer. Installing the printer software when the printer is connected to the computer through a USB hub can cause errors and prevent a successful installation.

- Continue with steps 5 and 6 below to finish the software installation.

連接印表機到您的電腦

註：安裝軟體提示之前，請勿連接您的印表機到電腦。

- 請單獨購買一條 USB 介面纜線。HP 建議 USB 纜線不要長於 10 英尺 (3 公尺)
- 將 USB 纜線的一端連接至電腦的 USB 埠。
- 將 USB 纜線的另一端連接至印表機背面的 USB 埠。

註：印表機正面的 USB 埠用於連接 HP 直接列印數位相機或筆記型電腦。

重要：確定印表機直接與電腦連接。如果經由 USB 集線器將印表機連接到電腦，安裝印表機軟體可能會出現錯誤並導致安裝失敗。

- 繼續執行下面的步驟 5 和步驟 6，完成軟體安裝。

Windows PC

- After connecting the printer to your computer, continue following the onscreen instructions to finish installing the HP Photosmart printer software and the Photo & Imaging software.
- At the end of the installation, the computer restarts. A welcome window appears. Click where it says **Print a demo page**.

Windows PC

- 將印表機連接到您的電腦之後，請繼續依照電腦螢幕上的指示完成「HP Photosmart 印表機軟體」和「HP 相片和影像軟體」的安裝。
- 安裝結束時會重新啟動電腦。出現歡迎視窗。在提示您**列印展示頁**的地方按一下。

Macintosh

- After connecting the printer to your computer, insert the HP Photosmart CD into your computer's CD-ROM drive. Double-click the **HP Photosmart CD** icon.
- Double-click the **HP Photosmart Install** icon. Follow the onscreen instructions to install the printer software.

Macintosh

- 在印表機連接到您的電腦之後，請將 HP Photosmart 光碟插入電腦的 CD-ROM 光碟機中。連接兩下 **HP Photosmart** 光碟圖示。
- 連接兩下 **HP Photosmart** 安裝圖示。依照電腦螢幕上的指示安裝印表機軟體。

fun features

The HP Photosmart Printer Help tells you how to:


- Print photos directly from your digital camera's memory card without using your computer
- Save photos from your memory card to your computer
- Print high-quality photos using 4 x 6 inches (10 x 15 cm) photo paper in the photo tray
- Print photo collage pages

易趣功能


HP Photosmart 印表機說明告訴您如何：

- 不必開啟電腦直接從數位相機的記憶卡列印相片
- 將記憶卡上的相片儲存到電腦上
- 使用相片匣中的 4 x 6 英寸 (10 x 15 公分) 相紙列印高品質的相片
- 列印相片拼貼頁

need more help? 需要更多協助嗎?

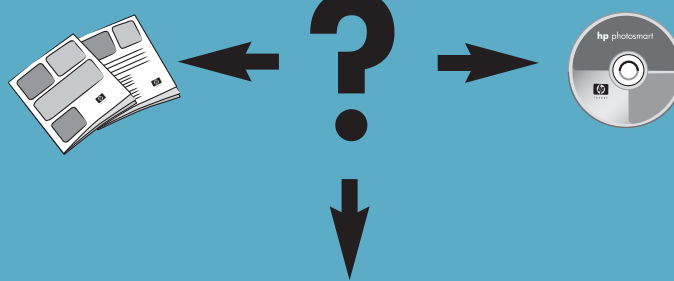

<http://china.support.hp.com/support>

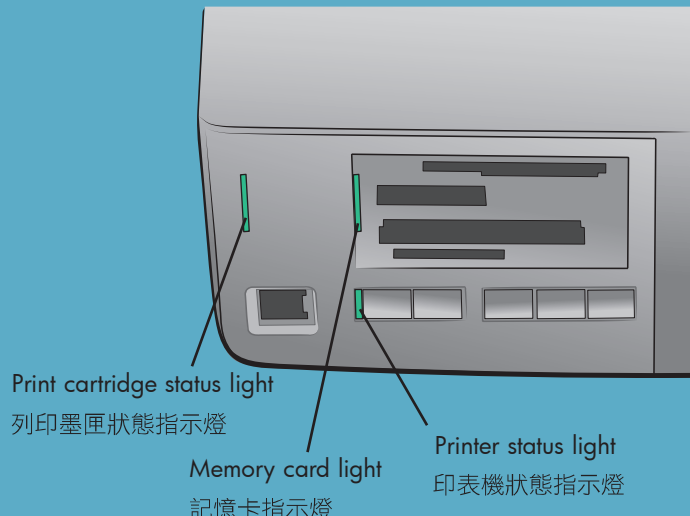

printer lights

Print cartridge status light — When this light is green, one of the print cartridges is low on ink. When this light flashes red, one of the print cartridges has failed.

Memory card light — When this light is on, a memory card is inserted in one of the memory card slots. When this light flashes green, the computer is accessing the memory card. When this light flashes red, there is an error.

Printer status light — When this light is on, the printer is on. When this light flashes green, the printer is busy. When this light flashes red, the printer requires attention.

印表機指示燈

列印墨匣狀態指示燈 — 此燈呈綠色亮起表示其中一個列印墨匣的墨水量低；呈紅色閃爍則表示其中一個列印墨匣發生錯誤。

記憶卡指示燈 — 此燈亮起表示已在印表機的其中一個記憶卡插槽插入記憶卡；呈綠色閃爍表示電腦正在存取記憶卡；呈紅色閃爍則表示出現錯誤。

印表機狀態指示燈 — 此燈亮起表示印表機已開啟；呈綠色閃爍表示印表機正在忙碌中；呈紅色閃爍則表示需要檢查印表機。

Printed in Singapore 04/03 v1.0.2 • Printed on recycled paper
© 2003 Hewlett-Packard Company
Windows is a registered trademark of Microsoft Corporation
Macintosh is a registered trademark of Apple Computer, Inc.

新加坡印刷，2003 年 4 月，v1.0.2 • 以再生紙印刷
© 2002 Hewlett-Packard Company
Windows 為 Microsoft Corporation 的註冊商標
Macintosh 為 Apple Computer, Inc. 的註冊商標

